



How To Measure Your Current Glass Unit To Order A Replacement Glass Unit


To measure your current glass unit that is installed within the frame, you will need to start by taking the glass unit out of the frame.

Once, you have taken the glass unit out of the frame, we can begin measuring the unit. We will need to get the measurements of Width, Height and Thickness of the glass unit.



So, starting off by measuring the width, we will measure from left to right of the glass unit. This is shown in the picture to the right.



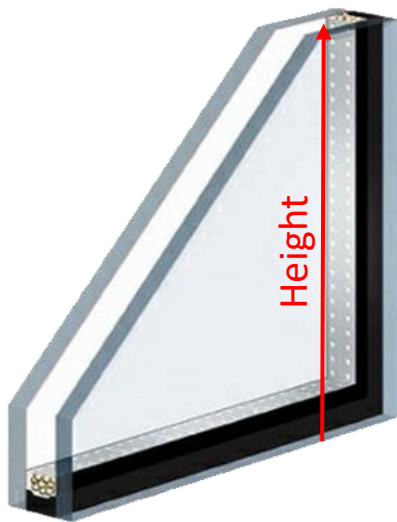

Then we will measure the Height. We will be measuring from bottom to top of the glass unit. This is shown in the picture to the left.

Finally measuring the thickness of the unit and this is why we take the glass unit out of the frame, as we cannot guess the thickness of the unit. We will start by measuring on the side, front to back. This will be shown in the picture to the right.



Thickness

If in doubt... Do not hesitate to call us on [0161 486 6049](tel:01614866049) we are here to help!